




Dryer

Use:

1. Open the door (by pushing the red marker on the door)
2. Put the laundry in the machine
3. Close the door and watch there are no clothes between the door.
4. Push the on / Off button: The control light will burn.
5. Select Dryer program or Dryer time.
6. Push button "Low temperature" and / or "Buzzer off" if necessary.
7. Push START - Button: The program will start and control light will burn.

Attention:

Put only clean laundry (domestic fabric) in the machine (maximum 5 kilogram). Before every use check if the water tank is empty and the fluff filter is clean.

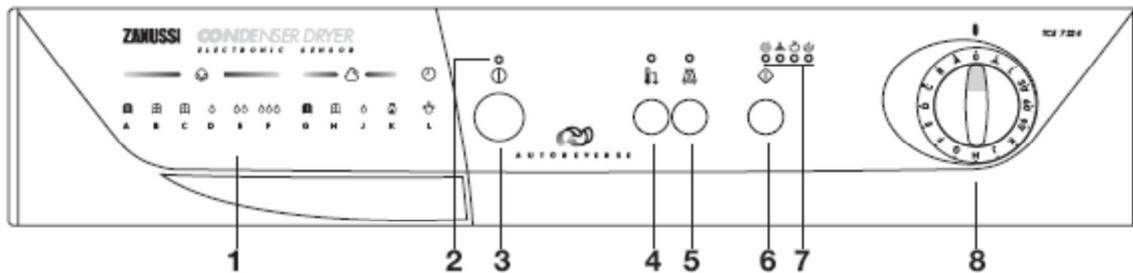


Controle Panel

1. Program list
2. Control light
3. Button on / off
4. Button low temperature
5. Button "buzzer off"
6. Button "Start"
7. Program indicator
8. Program button